3.5 INCH TOUCH SCREEN NAVIGATION SYSTEM

Accessories List

How To Turn On the Device

Peel the protective sticker off the GPS

Press the "ON" button located on top of the GPS

Keypad Operation and Screen Icons

Unit View Description

1. POWER button - Press the power button to enter or exit the standby mode.
2. LCD Screen

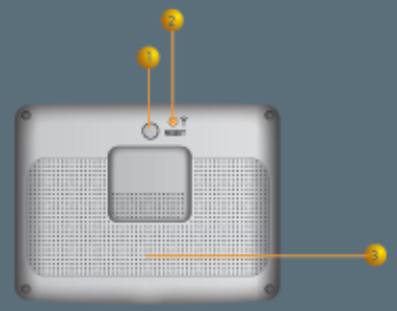

1. RESET button (if unit freezes press button)
2. Antenna Jack – (for use with optional external antenna)
3. Speaker

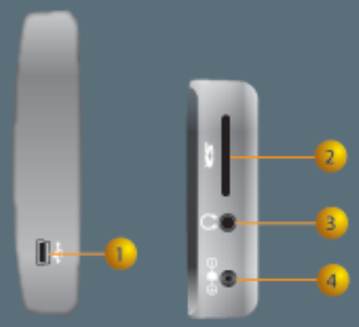

1. USB Port
2. SD Memory Card slot
3. Headphone Jack - Used to connect headphones for private listening. When the headphones are connected to this jack, the speaker will be turned off automatically.
4. DC 5V Input Jack - Used to connect to the supplied power adaptor.

Quick Steps to Navigate

1 Press Menu, Select Destination
2 Select Address
3 Select City or State (Change State if you are traveling to other states)
4 Enter City Name
5 Enter Street Name
6 Enter House Number
7 Select the Destination and press NAV button to Start Navigation
8 Start Navigation

Using the Mounting Bracket

When using the unit in vehicle, you can use the supplied mounting assemblies (mounting bracket, mounting cradle and dashboard mount disk) to mount the unit in the vehicle. Take the following steps to operate:

1. Slide the mounting cradle onto the end of the mounting bracket.
2. Lift the suction cup lever.
3. To mount to windshield, press the suction cup to the windshield and press down on the suction cup lever. To mount to dashboard, use the included adhesive disk. Choose a clean, dry spot on your dashboard, peel off protection liner from the back of the disk, and then attach the disk to your dashboard.

NOTICE TO DRIVERS IN CALIFORNIA AND MINNESOTA: State law prohibits drivers in California and Minnesota from using suction mounts on their windshields while operating motor vehicles. Other state or local laws may also prohibit drivers from using suction cups on their windshields. (See California Vehicle Code Section 26708(a); Minnesota Statutes 2005, Section 169.71)

Safety Advice

As with any digital media-based storage device, data should be backed up regularly. We strongly recommend that you observe the usage precautions laid out in this instruction, and also back up the data in your player regularly. In no event will Nextar be liable for any indirect, incidental, special or consequential damages to any persons caused by Nextar's negligence, or for any lost profits, lost savings, loss of use, lost revenues or lost data arising from or relating to this device, even if Nextar has been advised of the possibility of such damages. In no event will Nextar's liability or damages to you or any other person ever exceed the amount paid by you for the device, regardless of the form of the claim. Some countries/states do not allow the limitations or exclusion of liability for incidental or consequential damages, so the above limitation or exclusion may not apply to you.